



Quick start guide

Register your product and get support at
www.philips.com/welcome


PHILIPS

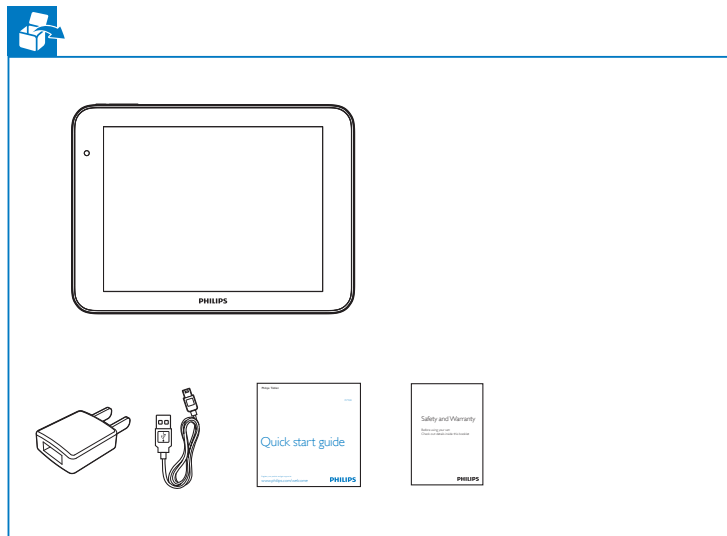

使用 Use

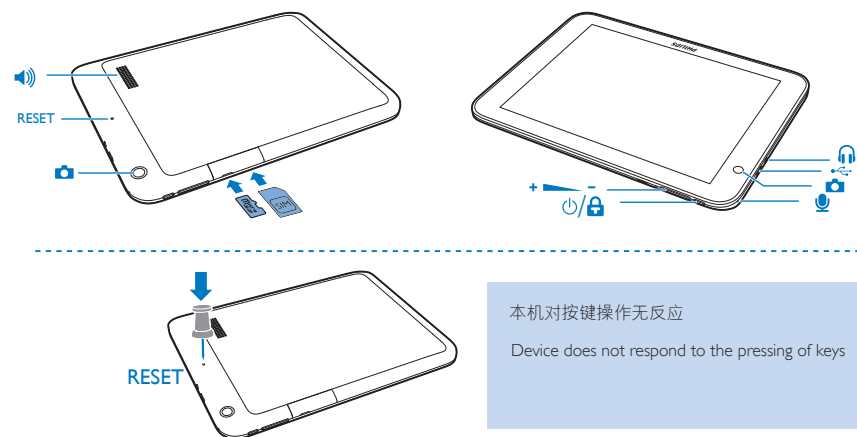

充电 Charge

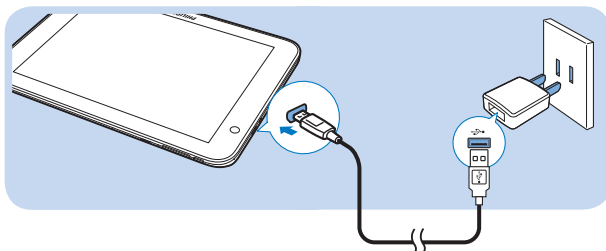


首次使用本机时，应使用随机所附的电源适配器为本机充电8小时以上。
The first time you use the device, use the by-packed power adapter to charge the device for more than eight hours.

注：当本机电量完全耗尽时，液晶显示屏即使在本机接入充电器后仍会因电池电量低而无法启动。请为本机充电至少30分钟后再次开机。

Tips: When battery of the device is over-drained, the LCD display may not be turned on due to low battery level even when charger is connected. Charge the device for at least 30 minutes before you switch the device on again.

电源 Power

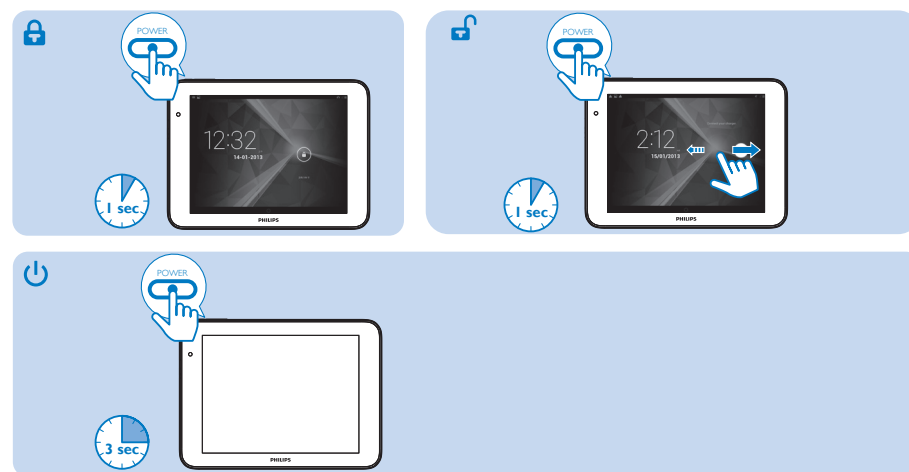

A. 选择语言 Select languages



页面导航 Navigate



在主屏幕 On the Home screen

左右滑动选择页面
Swipe left/ right to select a page.

在网络或本机上搜索
Search in the web or the device

进入主屏幕
Go to the Home screen

返回上层菜单或退出
Back one level or exit

选择最近使用过的应用程序
Switch to recent applications



进入设置菜单
Go to the settings menu

进入网络浏览器
Go to the web browser

查看所有应用
Find all the apps

下拉顶部菜单条
查看事件
Drag down the top bar to check events




下拉菜单：
开、关连接以及管理电量
Drop-down menu:
Switch connections on/off and manage power

：开、关横/竖屏切换。
：Switch on or off the screen rotation.

连接互联网 Connect to online services

经由Wi-Fi, 将本机接入互联网。在弹出屏幕选择设置选项, 拖动滑块开启Wi-Fi 并接入可用的网络。

Through Wi-Fi, connect **PI7100** to the Internet. On the pop-up screen for setup options, drag the slider to switch on Wi-Fi and connect to an available network.

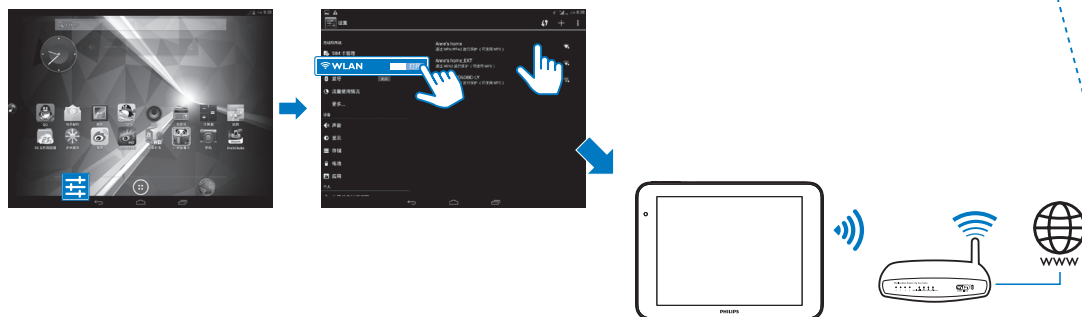

将WCDMA SIM卡装入将本机, 您经由WCDMA移动网络将本机接入互联网。


By mounting a WCDMA SIM card, you can connect **PI7100** to the Internet through the WCDMA mobile network.



在主屏幕, 使用下拉菜单开启、关闭Wi-Fi 或WCDMA。

From the Home screen, use the drop-down menu to switch Wi-Fi or WCDMA on or off.

安卓市场 HiMarket

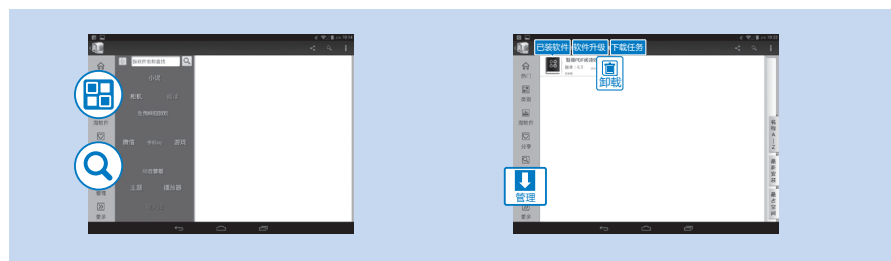

进入 搜索、下载、安装应用。

Go to 搜索 to search for, download, and install applications.

注: 安卓市场为开放平台, 应用开发者均可在此发布其应用。安卓市场所提供的应用的兼容性及其运行性能可因应用开发者的不同而有所不同。


Notes: HiMarket is an open platform for apps developers to promote their applications. Compatibility and quality of execution of apps in HiMarket may vary from developers to developers.

连接PC电脑 Connect to your PC




使用USB数据线将本机连接至PC电脑。你可在本机与PC电脑之间传输应用和媒体文件。


Use the USB cable to connect PI7100 to PC. You can drag and drop apps and media files between PI7100 and PC.

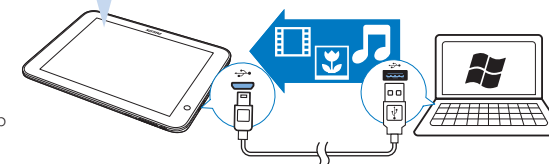

页面管理 Organize

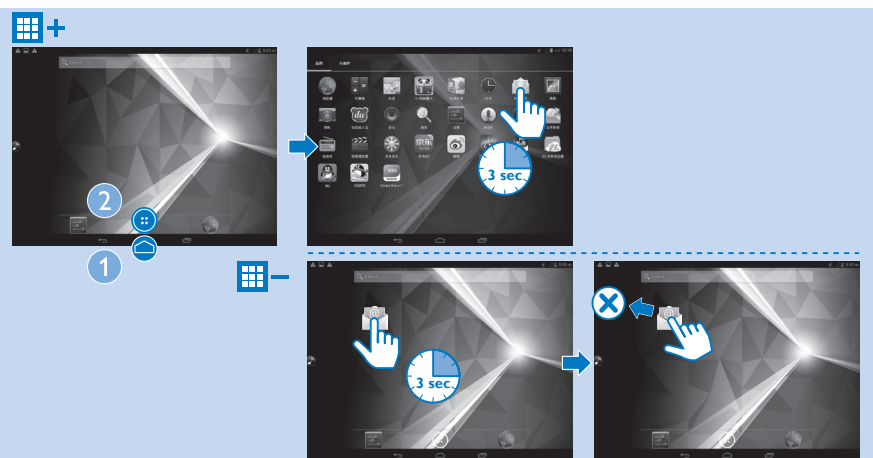

管理主屏幕页面上的图标、捷径、以及工具窗口以方便使用。
For quick access, organize icons, shortcuts, and widgets on the pages of Home screen.

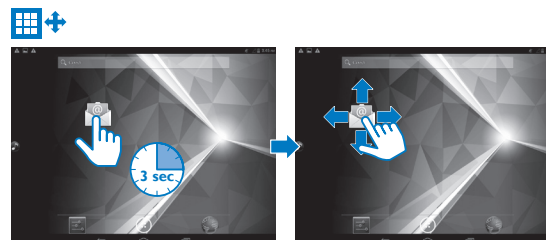

更多信息 More information



如需阅读用户手册, 请在 安卓市场下载安装PDF阅读器, 然后请转到 找到PDF阅读器
To read the User Manual, download and install a PDF reader from HiMarket, and then go to 找到PDF阅读器

如需获取有关支持信息, 请登录 www.philips.com/support。
Go to www.philips.com/support for support information.