Inspiron 15 7000 Series Service Manual



Notes, cautions, and warnings



NOTE: A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © **2015 Dell Inc. All rights reserved.** This product is protected by U.S. and international copyright and intellectual property laws. Dell™ and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

2015 - 08

Rev. A00

Contents

Before working inside your computer	9
Before you begin	9
Safety instructions	
Recommended tools	11
After working inside your computer	12
Removing the base cover	13
Procedure	13
Replacing the base cover	14
Procedure	
Removing the battery	15
Prerequisites	
Procedure	15
Replacing the battery	17
Procedure	
Post-requisites	17
Removing the memory modules	18
Prerequisites	
Procedure	18
Replacing the memory modules	20
Procedure	
Post-requisites	21

Removing the hard drive	22
Prerequisites	22
Procedure	22
Replacing the hard drive	25
Procedure	25
Post-requisites	25
Removing the wireless card	26
Prerequisites	26
Procedure	26
Replacing the wireless card	28
Procedure	
Post-requisites	28
Removing the keyboard	29
Prerequisites	29
Procedure	29
Replacing the keyboard	32
Procedure	
Post-requisites	32
Removing the palm rest	33
Prerequisites	33
Procedure	33
Replacing the palm rest	38
Procedure	
Post-requisites	38

Removing the power-button board	39
Prerequisites	39
Procedure	39
Replacing the power-button board	41
Procedure	
Post-requisites	41
Removing the coin-cell battery	42
Prerequisites	42
Procedure	42
Replacing the coin-cell battery	44
Procedure	44
Post-requisites	44
Removing the status-light board	45
Prerequisites	45
Procedure	45
Replacing the status-light board	47
Procedure	
Post-requisites	47
Removing the fans	48
Prerequisites	48
Procedure	48
Replacing the fans	51
Procedure	51
Post-requisites	51

Removing the I/O board	52
Prerequisites	52
Procedure	52
Replacing the I/O board	54
Procedure	
Post-requisites	54
Removing the system board	55
Prerequisites	55
Procedure	55
Replacing the system board	59
Procedure	59
Post-requisites	59
Entering the Service Tag in the BIOS setup program	60
Removing the heat sink	61
Prerequisites	61
Procedure	61
Replacing the heat sink	63
Procedure	63
Post-requisites	63
Removing the speakers	64
Prerequisites	64
Procedure	64
Replacing the speakers	66
Procedure	66
Post-requisites	66

Removing the subwoofer	67
Prerequisites	67
Procedure	67
Replacing the subwoofer	69
Procedure	
Post-requisites	69
Removing the power-adapter port	70
Prerequisites	70
Procedure	70
Replacing the power-adapter port	73
Procedure	
Post-requisites	73
Removing the display assembly	74
Prerequisites	74
Procedure	74
Replacing the display assembly	77
Procedure	
Post-requisites	77
Removing the display bezel	78
Prerequisites	
Procedure	78
Replacing the display bezel	80
Procedure	
Post-requisites	80

Removing the display panel	81
Prerequisites	
Procedure	82
Replacing the display panel	84
Procedure	
Post-requisites	84
Removing the display hinge and bracket assembly	85
Prerequisites	
Procedure	85
Replacing the display hinge and bracket assembly	87
Procedure	87
Post-requisites	87
Removing the camera	88
Prerequisites	88
Procedure	88
Replacing the camera	90
Procedure	
Post-requisites	90
Flashing the BIOS	91
Getting help and contacting Dell	92
Self-help resources	
Contacting Dell	93

Before working inside your computer



CAUTION: To avoid damaging the components and cards, handle them by their edges and avoid touching pins and contacts.



NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Before you begin

- **1** Save and close all open files and exit all open applications.
- 2 Shut down your computer.
 - Windows 10: Click or tap Start → **②** Power → Shut down.
 - Windows 8.1: On the **Start** screen, click or tap the power icon $\bullet \to \bullet$ **Shut down**.
 - Windows 7: Click or tap Start → Shut down.



NOTE: If you are using a different operating system, see the documentation of your operating system for shut-down instructions.

- 3 Disconnect your computer and all attached devices from their electrical outlets
- 4 Disconnect all cables such as telephone cables, network cables and so on, from your computer.
- 5 Disconnect all attached devices and peripherals, such as keyboard, mouse, monitor, and so on, from your computer.
- **6** Remove any media card and optical disc from your computer, if applicable.

Safety instructions

Use the following safety guidelines to protect your computer from potential damage and ensure your personal safety.



WARNING: Before working inside your computer, read the safety information that shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



WARNING: Disconnect all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting to the power source.



CAUTION: To avoid damaging the computer, ensure that the work surface is flat and clean.



CAUTION: To avoid damaging the components and cards, handle them by their edges and avoid touching pins and contacts.



△ CAUTION: You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that shipped with the product or at www.dell.com/regulatory_compliance.



CAUTION: Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity, which could harm internal components.



CAUTION: When you disconnect a cable, pull on its connector or on its pull tab, not on the cable itself. Some cables have connectors with locking tabs or thumb-screws that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending any connector pins. When connecting cables, ensure that the ports and connectors are correctly oriented and aligned.



CAUTION: Press and eject any installed card from the media-card reader.

Recommended tools

The procedures in this document may require the following tools:

- Philips screwdriver
- Torx #8 (T8) screwdriver
- Plastic scribe

After working inside your computer

Δ

CAUTION: Leaving stray or loose screws inside your computer may severely damage your computer.


- 1 Replace all screws and ensure that no stray screws remain inside your computer.
- 2 Connect any external devices, peripherals, and cables you removed before working on your computer.
- 3 Replace any media cards, discs, and any other parts that you removed before working on your computer.
- 4 Connect your computer and all attached devices to their electrical outlets.
- **5** Turn on your computer.

Removing the base cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

- 1 Close the display and turn the computer over.
- 2 Loosen the captive screw that secures the base cover to the computer base.
- **3** Using a plastic scribe, pry the base cover off the computer base.

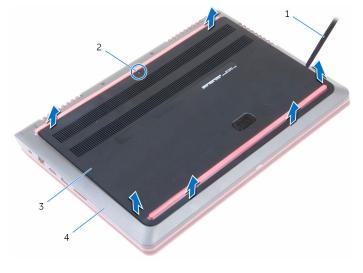

- 1 plastic scribe
- 3 base cover

- 2 captive screw
- 4 computer base

Replacing the base cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

- 1 Slide the tabs on the base cover into the slots on the computer base and snap the base cover into place.
- 2 Tighten the captive screw that secures the base cover to the computer base.

Removing the battery




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

Remove the base cover.


- 1 Disconnect the battery cable from the system board.
- 2 Remove the screws that secure the battery to the computer base.

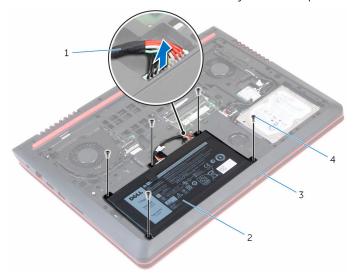

- 1 battery cable
- 3 computer base

- 2 battery
- 4 Trox-8 screws (5)

3 Using the pull tab, lift the battery, along with its cable, out of the computer base.

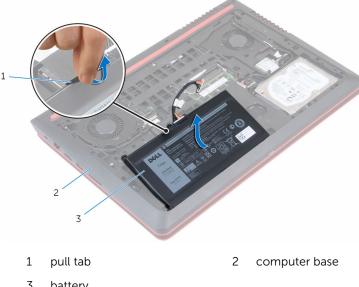

- 3 battery
- Turn the computer over, open the display, and press the power button for five seconds to ground the system board.

Replacing the battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align the screw holes on the battery with the screw holes on the computer base.
- 2 Replace the screws that secure the battery to the computer base.
- **3** Connect the battery cable to the system board.
- **4** Turn the computer over and open the display as far as possible.

Post-requisites

Replace the base cover.

Removing the memory modules




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.

Procedure

1 Use your fingertips to carefully spread apart the securing-clips on each end of the memory-module slot until the memory module pops up. 2 Slide and remove the memory module from the memory-module slot.

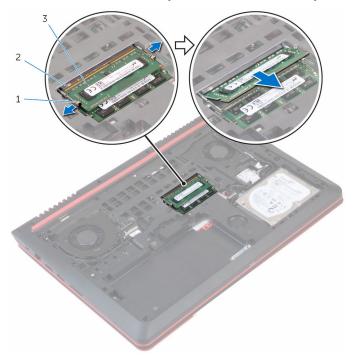

- 1 securing clips (2)
- 3 memory module

2 memory-module slot

Replacing the memory modules




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

Align the notch on the memory module with the tab on the memorymodule slot.

- 2 Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.
 - NOTE: If you do not hear the click, remove the memory module and reinstall it.

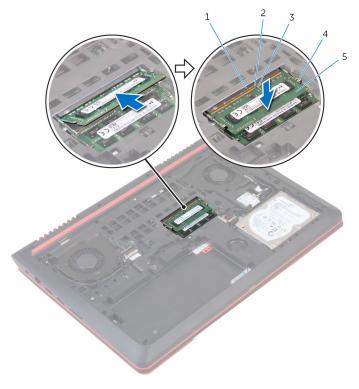

- 1 slot
- 3 notch
- 5 memory module

- 2 tab
- 4 securing clips (2)

Post-requisites

- **1** Replace the battery.
- 2 Replace the <u>base cover</u>.

Removing the hard drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



CAUTION: Hard drives are fragile. Exercise care when handling the hard drive.




CAUTION: To avoid data loss, do not remove the hard drive while the computer is in sleep or on state.

Prerequisites

- **1** Remove the <u>battery</u>.
- 2 Remove the <u>base cover</u>.

- 1 Remove the screws that secure the hard-drive assembly to the computer base.
- 2 Using the pull-tab, disconnect the hard-drive cable from the system board.

3 Lift the hard-drive assembly off the computer base.

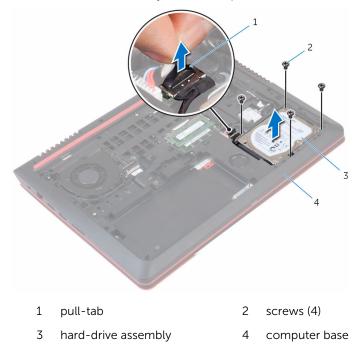

4 Disconnect the interposer from the hard drive.

5 Remove the screws that secure the hard-drive bracket to the hard drive and lift the bracket off the hard drive.



1 interposer

- 2 screws (4)
- 3 hard-drive bracket
- 4 hard drive

Replacing the hard drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



CAUTION: Hard drives are fragile. Exercise care when handling the hard drive.

Procedure

- 1 Align the screw holes on the hard-drive bracket with the screw holes on the hard drive.
- 2 Replace the screws that secure the hard-drive bracket to the hard drive.
- **3** Connect the interposer to the hard-drive assembly.
- 4 Align the screw holes on the hard-drive assembly with the screw holes on the computer base.
- 5 Replace the screws that secure the hard-drive assembly to the computer base.
- **6** Connect the hard-drive cable to the system board.

Post-requisites

- 1 Replace the <u>base cover</u>.
- 2 Replace the battery.

Removing the wireless card




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.

- 1 Disconnect the antenna cables from the wireless card.
- 2 Remove the screw that secures the wireless card to the system board.

3 Slide and remove the wireless card out of the wireless-card slot.

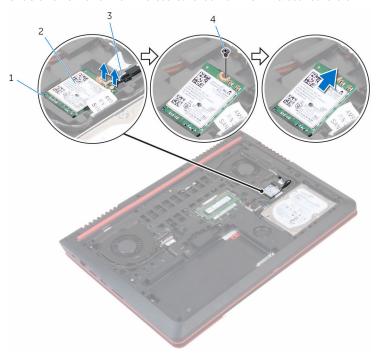

- 1 wireless-card slot
- 3 antenna cables (2)
- 2 wireless card
- 4 screw

Replacing the wireless card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure



CAUTION: To avoid damage to the wireless card, do not place any cables under it.

- Align the notch on the wireless card with the tab on the wireless-card slot.
- 2 Insert the wireless card into the wireless-card slot.
- **3** Replace the screw that secures the wireless card to the system board.
- 4 Connect the antenna cables to the wireless card.
 The following table provides the antenna-cable color scheme for the wireless card supported by your computer.

Connectors on the wireless card	Antenna-cable color
Main (white triangle)	white
Auxiliary (black triangle)	black

Post-requisites

- 1 Replace the battery.
- 2 Replace the base cover.

Removing the keyboard



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites


Remove the battery.

- 1 Turn the computer over and open the display as far as possible.
- 2 Using a plastic scribe, gently release the tabs that secure the keyboard to the palm-rest assembly.

Carefully turn the keyboard over and place it on the palm-rest assembly.



4 Open the latches and disconnect the keyboard cable and the keyboard-backlight cable from the system board.

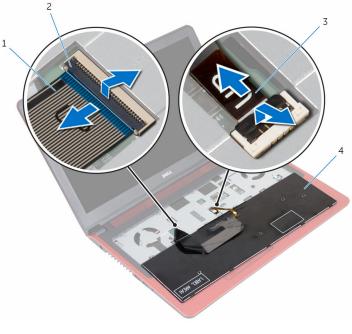

1 keyboard cable

- 2 latches (2)
- 3 keyboard-backlight cable
- 4 keyboard
- **5** Lift the keyboard, along with the cables, off the palm-rest assembly.

Replacing the keyboard



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- Slide the keyboard cable and keyboard-backlight cable into their connectors and close the latches to secure the cables.
- 2 Carefully turn the keyboard over, slide the tabs on the keyboard into the slots on the palm rest, and snap the keyboard into place.
- **3** Close the display and turn the computer over.

Post-requisites

Replace the battery.

Removing the palm rest




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the keyboard.


Procedure

1 Open the latches and disconnect the touch-pad cable and power-button cable from the system board. 2 Remove the screws that secure the palm-rest assembly to the computer base.

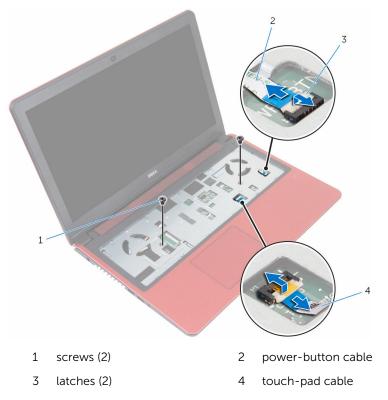


Close the display and turn the computer over.

4 Remove the screws that secure the palm-rest assembly to the computer base.

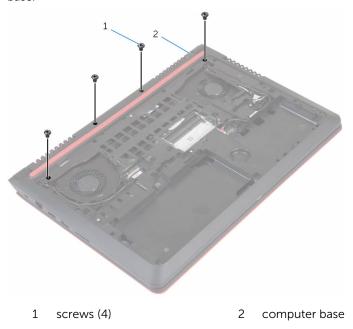


5 Lift the computer base and, using a plastic scribe, release the palm-rest assembly from the computer base

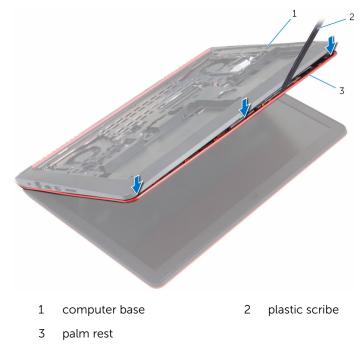

Turn the computer over and open the display.

7 Lift the palm-rest assembly off the computer base.

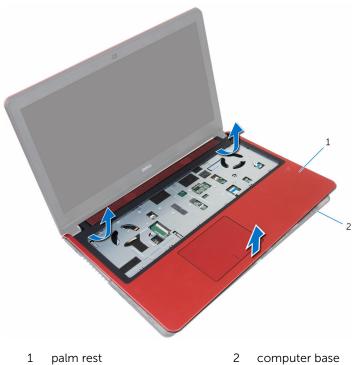

- 2 computer base
- Remove the <u>power-button board</u>. 8

Replacing the palm rest



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Replace the power-button board.
- 2 Align the screw holes on the palm rest with the screw holes on the computer base and snap the palm rest into place.
- **3** Replace the screws that secure the palm rest to the computer base.
- 4 Slide the touch-pad cable and power-button cable into the connectors and close the latches to secure the cables.
- **5** Close the display and turn the computer over.
- 6 Replace the screws that secure the palm rest to the computer base.

- **1** Replace the <u>keyboard</u>.
- 2 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- **3** Replace the battery.
- 4 Replace the base cover.

Removing the power-button board




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the keyboard.
- 5 Follow the procedure from step 1 to step 7 in "Removing the palm rest".

Procedure

 Open the latch and disconnect the power-button cable from the power button board. 2 Lift the power button board off the palm rest.

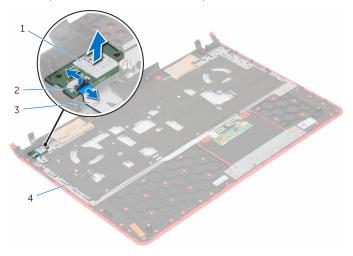

- 1 power button board
- 3 power-button cable
- 2 latch
- 4 palm rest

Replacing the power-button board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Place the power button board in the slot on the palm rest.
- 2 Slide the power-button cable into its connector on the power button board and close the latch to secure the cable.

- 1 Follow the procedure from step 2 to step 6 in "Replacing the palm rest".
- 2 Replace the <u>keyboard</u>.
- Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 4 Replace the <u>battery</u>.
- **5** Replace the <u>base cover</u>.

Removing the coin-cell battery

Δ

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



CAUTION: Removing the coin-cell battery resets the BIOS setup program's settings to default. It is recommended that you note the BIOS setup program's settings before removing the coin-cell battery.


Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the battery.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the keyboard.
- **5** Follow the procedure from step 1 to step 7 in "Removing the palm rest".

Procedure

1 Disconnect the coin-cell battery cable from the system board.

2 Using a plastic scribe, gently pry the coin-cell battery out of the battery socket on the computer base.

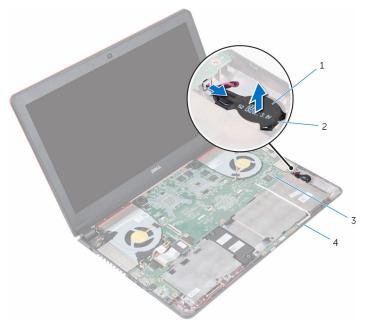

- 1 coin-cell battery
- 3 system board

- 2 battery socket
- 4 computer base

Replacing the coin-cell battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 With the positive-side facing up, snap the coin-cell battery into the battery socket on the computer base.
- 2 Connect the coin-cell battery cable to the system board.

- 1 Follow the procedure from step 2 to step 6 in "Replacing the palm rest".
- 2 Replace the keyboard.
- **3** Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 4 Replace the <u>battery</u>.
- 5 Replace the base cover.

Removing the status-light board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the keyboard.
- 5 Follow the procedure from step 1 to step 7 in "Removing the palm rest".

Procedure

1 Open the latch and disconnect the status-light board cable from the status light board.

2 Lift the status light board off the computer base.

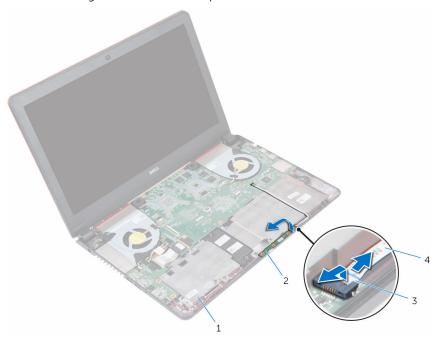

- 1 computer base
- 3 latch

- 2 status light board
- 4 status-light board cable

Replacing the status-light board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Place the status-light board in the slot on the computer base.
- 2 Slide the status-light board cable into the connector on the status light board and close the latch to secure the cable.

- 1 Follow the procedure from step 2 to step 6 in "Replacing the palm rest".
- 2 Replace the keyboard.
- Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 4 Replace the <u>battery</u>.
- 5 Replace the base cover.

Removing the fans



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the keyboard.
- **5** Follow the procedure from step 1 to step 7 in "Removing the palm rest".

Procedure


- 1 Disconnect the left-fan cable from the system board.
- 2 Remove the I/O-board power cables from the routing guides on the left fan

3 Lift the left fan along with its cable off the computer base.

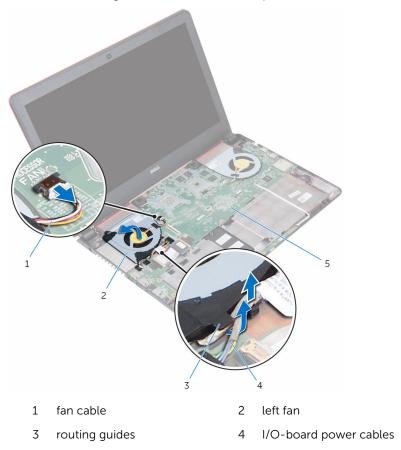

- 5 system board
- 4 Disconnect the right-fan cable from the system board.

5 Lift the right-fan along with its cable off the computer base.

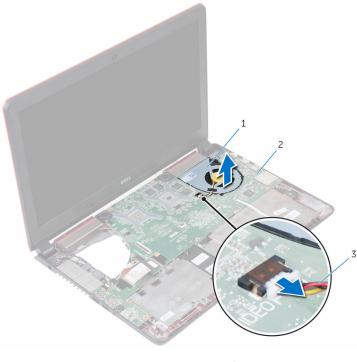

- 1 right fan
- 3 fan cable

2 system board

Replacing the fans



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Using the alignment posts, place the right fan on the computer base.
- **2** Connect the right-fan cable to the system board.
- **3** Using the alignment posts, place the left fan on the computer base.
- 4 Route the I/O-board power cables through the routing guides on the left fan.
- 5 Connect the left-fan cable to the system board.

- 1 Follow the procedure from step 2 to step 6 in "Replacing the palm rest".
- 2 Replace the keyboard.
- **3** Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 4 Replace the <u>battery</u>.
- 5 Replace the base cover.

Removing the I/O board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the keyboard.
- **5** Follow the procedure from step 1 to step 7 in "Removing the palm rest".

Procedure

- 1 Disconnect the I/O-board power cables from the I/O board.
- 2 Open the latch and disconnect the I/O-board cable from the I/O board.
- 3 Disconnect the sub-woofer cable from the I/O board.

4 Lift the I/O board off the computer base.

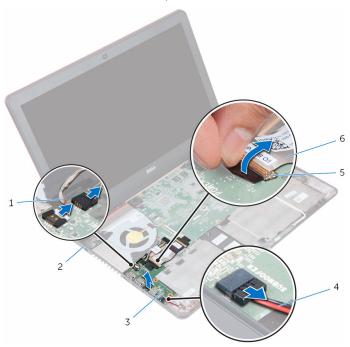

- 1 I/O-board power cables (2)
- 3 I/O board
- 5 latch

- 2 computer base
- 4 sub-woofer cable
- 6 I/O-board cable

Replacing the I/O board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align and place the I/O-board on the computer base.
- 2 Slide the I/O-board cable into its connector on the I/O board and close the latch to secure the cable.
- 3 Connect the I/O-board power cables and sub-woofer cable to the I/O board.

- 1 Follow the procedure from step 2 to step 6 in "Replacing the palm rest".
- 2 Replace the <u>keyboard</u>.
- **3** Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 4 Replace the <u>battery</u>.
- **5** Replace the <u>base cover</u>.

Removing the system board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



NOTE: Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



NOTE: Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the desired changes again after you replace the system board.



NOTE: Before disconnecting the cables from the system board, note the location of the connectors so that you can reconnect the cables correctly after you replace the system board.


Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the battery.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the memory modules.
- 5 Remove the wireless card.
- **6** Remove the keyboard.
- 7 Follow the procedure from step 1 to step 7 in "Removing the palm rest".
- 8 Remove the I/O board.
- **9** Remove the fans.

Procedure

1 Using the pull tab, disconnect the display cable from the system board.

2 Disconnect the power-adapter port cable from the system board.

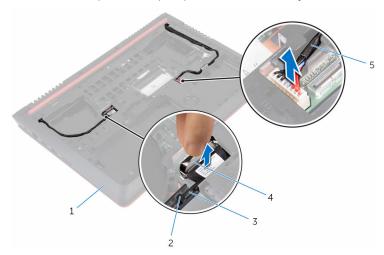


1 computer base

2 routing guides

3 display cable


- 4 pull tab
- 5 power-adapter port cable
- **3** Turn the computer over and open the display.
- 4 Disconnect the speaker cable, I/O-board power cable, and coin-cell battery cable from the system board.
- **5** Peel the tape that secures the I/O board cable to the system board.

6 Open the latches and disconnect the I/O board cable and status-light board cable from the system board.

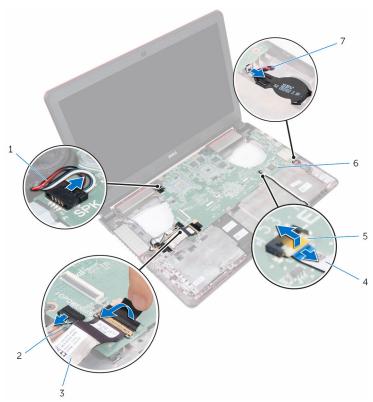

- 1 speaker cable
- 3 I/O board cable
- 5 latch
- 7 coin-cell battery cable
- 2 I/O-board power cable
- 4 status-light board cable
- 6 system board

7 Lift the system board at an angle, slide and release the ports from the slots on the computer base.

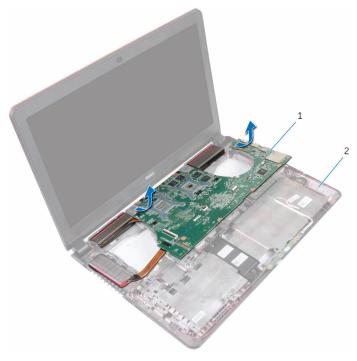

1 system board

- 2 computer base
- 8 Turn the system board over.
- **9** Remove the <u>speakers</u>.
- **10** Remove the <u>heat sink</u>.

Replacing the system board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



NOTE: Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



NOTE: Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the desired changes again after you replace the system board.

Procedure

- 1 Replace the heat sink.
- 2 Replace the speakers.
- **3** Turn the system board over.
- 4 Slide the ports on the system board into the slots on the computer base and place the system board on the computer base.
- 5 Connect the speaker cable, I/O-board power cable, and coin-cell battery cable to the system board.
- **6** Slide the I/O board cable and status-light board cable into the connector on the system board and close the latches to secure the cables.
- 7 Adhere the tape that secures the I/O board cable to the system board.
- **8** Close the display and turn the computer over.
- 9 Connect the power-adapter port cable and display cable to the system board

- 1 Replace the fans.
- 2 Replace the I/O board.
- **3** Follow the procedure from step 2 to step 6 in "Replacing the palm rest".

- 4 Replace the <u>keyboard</u>.
- **5** Replace the <u>wireless card</u>.
- 6 Replace the memory modules.
- 7 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- **8** Replace the <u>battery</u>.
- **9** Replace the <u>base cover</u>.

Entering the Service Tag in the BIOS setup program

- **1** Turn on the computer.
- **2** Press F2 when the DELL logo is displayed to enter the BIOS setup program.
- 3 Navigate to the **Main** tab and enter the Service Tag in the **Service Tag Input** field.

Removing the heat sink



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



WARNING: The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.



CAUTION: For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the memory modules.
- **5** Remove the wireless card.
- **6** Remove the keyboard.
- 7 Follow the procedure from step 1 to step 7 in "Removing the palm rest".
- 8 Remove the I/O board.
- **9** Remove the fans.
- **10** Follow the procedure from step 1 to step 7 in "Removing the system board.


Procedure



NOTE: The appearance of the heat sink on your computer may differ from the image shown in this chapter.

- 1 Place the system board on a clean and flat surface.
- 2 In sequential order (indicated on the heat-sink), loosen the captive screws that secure the heat sink to the system board.

3 Lift the heat sink off the system board.

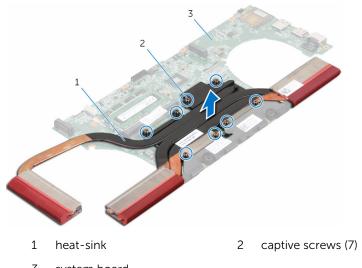

3 system board

Replacing the heat sink



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



CAUTION: Incorrect alignment of the heat sink can cause damage to the system board and processor.



NOTE: The original thermal grease can be reused if the original system board and heat sink are reinstalled together. If either the system board or the heat sink is replaced, use the thermal pad provided in the kit to ensure that thermal conductivity is achieved.

Procedure

- 1 Align the screw holes on the heat sink with the screw holes on the system board.
- 2 In sequential order (indicated on the heat-sink), tighten the captive screws that secure the heat sink to the system board.

- 1 Follow the procedure from step 4 to step 8 in "Replacing the system board".
- 2 Replace the fans.
- **3** Replace the <u>I/O board</u>.
- 4 Follow the procedure from step 2 to step 6 in "Replacing the palm rest".
- **5** Replace the <u>keyboard</u>.
- 6 Replace the wireless card.
- 7 Replace the <u>memory modules</u>.
- 8 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- **9** Replace the <u>battery</u>.
- 10 Replace the base cover.

Removing the speakers



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the memory modules.
- **5** Remove the <u>wireless card</u>.
- 6 Remove the keyboard.
- 7 Follow the procedure from step 1 to step 7 in "Removing the palm rest".
- 8 Remove the I/O board.
- **9** Remove the fans.
- **10** Follow the procedure from step 1 to step 7 in "Removing the system board".

Procedure

1 Note the position of the rubber grommets before lifting the speaker.

2 Lift the speaker at an angle off the system board.

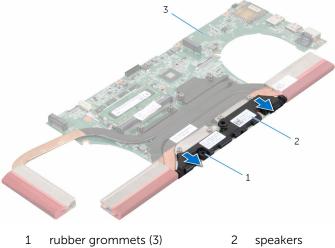

3 system board

Replacing the speakers



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure



NOTE: The rubber grommets may get pushed out while replacing the speaker. Ensure that the rubber grommets are in their position after placing the speaker on the system board.

- 1 Using the alignment posts, align and place the speaker on the system board.
- 2 Replace the rubber grommets if they are pushed up while replacing the speaker.

- 1 Follow the procedure from step 4 to step 8 in "Replacing the system board".
- 2 Replace the fans.
- **3** Replace the I/O board.
- 4 Follow the procedure from step 2 to step 6 in "Replacing the palm rest".
- **5** Replace the keyboard.
- 6 Replace the wireless card.
- 7 Replace the memory modules.
- **8** Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- **9** Replace the <u>battery</u>.
- **10** Replace the base cover.

Removing the subwoofer



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the memory modules.
- **5** Remove the <u>wireless card</u>.
- 6 Remove the keyboard.
- 7 Follow the procedure from step 1 to step 7 in "Removing the palm rest".
- 8 Remove the I/O board.
- **9** Remove the fans.
- **10** Follow the procedure from step 1 to step 7 in "Removing the system board".

Procedure

- 1 Note the sub-woofer cable routing and remove it from the routing guides on the computer base.
- 2 Note the position of the rubber grommets before lifting the sub woofer.

3 Lift the sub woofers off the computer base.



- 1 sub-woofer cable
- 2 sub woofer

computer base 3

Replacing the subwoofer



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure



NOTE: The rubber grommets may get pushed out while replacing the sub woofers. Ensure that the rubber grommets are in their position after placing the sub woofers on the computer base.

- 1 Using the alignment posts, align and place the sub woofers on the computer base.
- 2 Route the sub-woofer cable through the routing guides on the computer base.
- 3 Replace the rubber grommets if they are pushed up while replacing the sub woofers.

- 1 Follow the procedure from step 4 to step 8 in "Replacing the system board".
- 2 Replace the fans.
- **3** Replace the I/O board.
- 4 Follow the procedure from step 2 to step 6 in "Replacing the palm rest".
- **5** Replace the keyboard.
- 6 Replace the wireless card.
- 7 Replace the memory modules.
- **8** Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- **9** Replace the <u>battery</u>.
- 10 Replace the base cover.

Removing the power-adapter port



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the keyboard.
- 5 Follow the procedure from step 1 to step 7 in "Removing the palm rest".
- **6** Follow the procedure from step 1 to step 3 in "Removing the fans".

Procedure

- 1 Disconnect the power-adapter port cable from the system board.
- 2 Note the power-adapter port cable routing and remove it from the routing guides on the computer base.


3 Slide the power-adapter port cable through the slot on the computer base.

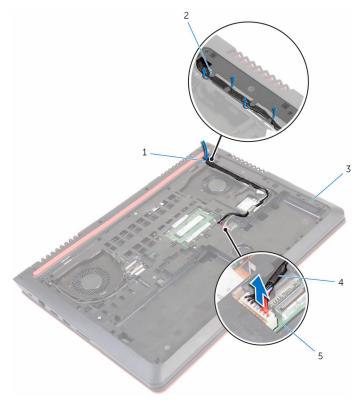

- 1 slot
- 3 computer base
- 5 system board
- 4 Turn the computer over.

- 2 routing guides
- 4 power-adapter port cable

5 Lift the power-adapter port along with its cable off the computer base.

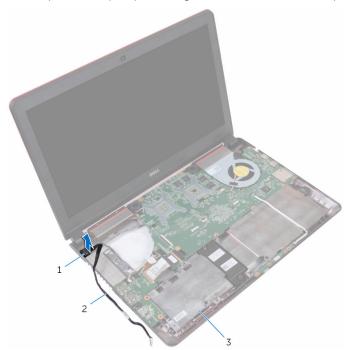

- 1 power-adapter port
- 2 power-adapter port cable

3 computer base

Replacing the power-adapter port



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Insert the power-adapter port into the slot on the computer base.
- 2 Slide the power-adapter port cable through the slot on the computer base.
- **3** Turn the computer over.
- 4 Route the power-adapter port cable through the routing guides on the computer base.
- 5 Connect the power-adapter port cable to the system board.

- 1 Follow the procedure from step 1 to step 3 in "Replacing the fans".
- 2 Follow the procedure from step 2 to step 6 in "Replacing the palm rest".
- **3** Replace the <u>keyboard</u>.
- 4 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 5 Replace the <u>base cover</u>.
- 6 Replace the battery.

Removing the display assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Prerequisites

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the keyboard.
- 5 Follow the procedure from step 1 to step 7 in "Removing the palm rest".
- 6 Remove the fans.

Procedure

- 1 Close the display and turn the computer over.
- 2 Using the pull tab, disconnect the display cable from the system board.
- 3 Note the display-cable routing and remove the cable from the routing guides on the computer base.
- **4** Disconnect the antenna cables from the wireless card.
- 5 Note the antenna-cable routing and remove the antenna cables from the routing guides on the computer base.


6 Slide the display cable and antenna cables through the slots on the computer base.

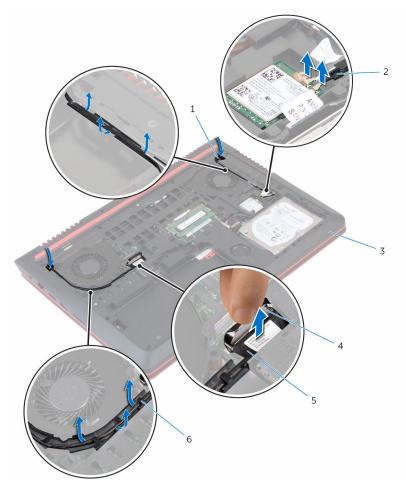

- 1 slots (2)
- 3 computer base
- 5 display cable

- 2 antenna cables (2)
- 4 pull tab
- 6 routing guides
- **7** Remove the screws that secure the display assembly to the computer base.

8 Lift the display assembly off the computer base.

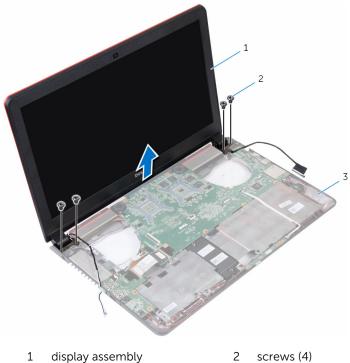

1 display assembly

3 computer base

Replacing the display assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align the screw holes on the display assembly with the screw holes on the computer base.
- 2 Replace the screws that secure the display assembly to the computer base.
- **3** Slide the display cable and antenna cables through the slot on the computer base.
- 4 Route the display cable and antenna cables through the routing guides on the computer base.
- **5** Connect the antenna cables to the wireless card.
- **6** Connect the display cable to the system board.
- 7 Close the display and turn the computer over.

- 1 Replace the fans.
- **2** Follow the procedure from step 2 to step 6 in "Replacing the palm rest".
- **3** Replace the <u>keyboard</u>.
- 4 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 5 Replace the base cover.
- 6 Replace the battery.

Removing the display bezel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites



NOTE: These instructions are applicable only for laptops with a non-touch screen display.

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the keyboard.
- 5 Follow the procedure from step 1 to step 7 in "Removing the palm rest".
- 6 Remove the fans.
- 7 Remove the display assembly.

Procedure

1 Using your fingertips, gently pry up the inner edges of the display bezel.

2 Lift the display bezel off the display assembly.



- 1 display back-cover
- 2 display bezel

Replacing the display bezel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

Align the display bezel with the display back-cover and gently snap the display bezel into place.

- 1 Replace the <u>display assembly</u>.
- 2 Replace the fans.
- **3** Follow the procedure from step 2 to step 6 in "Replacing the palm rest".
- 4 Replace the keyboard.
- 5 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 6 Replace the base cover.
- 7 Replace the battery.

Removing the display panel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites




NOTE: These instructions are applicable only for laptops with a non-touch screen display.

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the keyboard.
- 5 Follow the procedure from step 1 to step 7 in "Removing the palm rest".
- **6** Remove the fans.
- 7 Remove the display assembly.
- 8 Remove the display bezel.


Procedure

1 Remove the screws that secure the display panel to the display backcover.

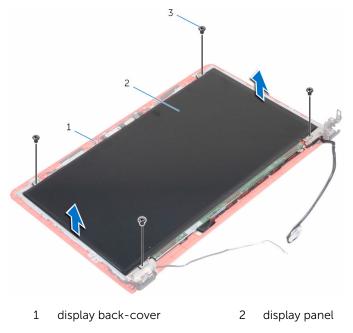

- 3 screws (4)
- 2 Turn the display panel over.
- **3** Peel the tape that secures the display cable to the display-back cover.
- 4 Open the latch and disconnect the display cable from the display-back cover.

5 Lift the display panel off the display back-cover.

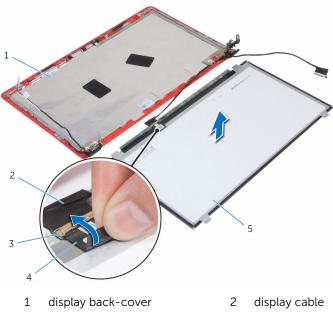

- 3 latch
- 5 display panel

4 tape

Replacing the display panel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Slide the display cable into the connector on the display back-cover and close the latch to secure the cable.
- 2 Adhere the tape that secures the display cable to the display back-cover.
- **3** Turn the display panel over and place it on the display back-cover.
- 4 Align the screw holes on the display panel with the screw holes on the display back-cover.
- 5 Replace the screws that secure the display panel to the display backcover.

- 1 Replace the <u>display bezel</u>.
- 2 Replace the display assembly.
- **3** Replace the fans.
- 4 Follow the procedure from step 2 to step 6 in "Replacing the palm rest".
- **5** Replace the keyboard.
- **6** Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 7 Replace the base cover.
- 8 Replace the battery.

Removing the display hinge and bracket assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites




NOTE: These instructions are applicable only for laptops with a non-touch screen display.

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the keyboard.
- 5 Follow the procedure from step 1 to step 7 in "Removing the palm rest".
- **6** Remove the fans.
- 7 Remove the display assembly.
- 8 Remove the display bezel.
- **9** Remove the display panel.

Procedure

- 1 Note the antenna-cable routing and remove the antenna cables from the routing guides on the display hinges.
- 2 Note the display cable routing and remove the display cable from the routing guides on the display hinges.
- 3 Remove the screws that secure the display hinges to the display backcover.

4 Release the hinges from the latches and lift the display hinges off the display back-cover.

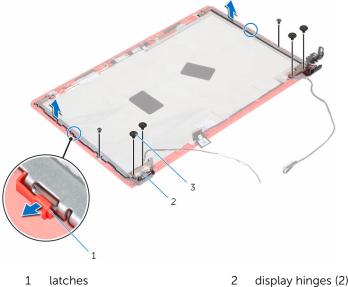

1

display hinges (2)

3 screws (6)

Replacing the display hinge and bracket assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Slide the hinges under the latches on the display back-cover.
- 2 Align the screw holes on the display hinges with the screw holes on the display back-cover.
- 3 Replace the screws that secure the display hinges to the display backcover.
- 4 Route the antenna cable and display cable through the routing guides on the display hinges.

- 1 Replace the <u>display panel</u>.
- 2 Replace the display bezel.
- **3** Replace the <u>display assembly</u>.
- 4 Replace the fans.
- 5 Follow the procedure from step 2 to step 6 in "Replacing the palm rest".
- **6** Replace the <u>keyboard</u>.
- 7 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 8 Replace the base cover.
- **9** Replace the <u>battery</u>.

Removing the camera



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites




NOTE: These instructions are applicable only for laptops with a non-touch screen display.

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the keyboard.
- **5** Follow the procedure from step 1 to step 7 in "Removing the palm rest".
- **6** Remove the <u>fans</u>.
- 7 Remove the display assembly.
- 8 Remove the <u>display bezel</u>.
- **9** Remove the display panel.

Procedure

- 1 Using a plastic scribe, gently pry the camera from the display back-cover and turn it over.
- 2 Peel off the tape that secures the camera cable to the camera.

3 Turn the camera over and disconnect the camera cable from the camera.

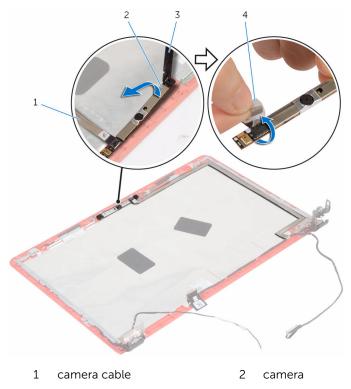

3 plastic scribe

4 tape

Replacing the camera



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Connect the camera cable to the camera.
- 2 Adhere the tape that secures the camera cable to the camera.
- Turn the camera over and align the camera to the alignment posts on the display back-cover and snap the camera in place.

- 1 Replace the display panel.
- 2 Replace the display bezel.
- 3 Replace the display assembly.
- 4 Replace the fans.
- 5 Follow the procedure from step 2 to step 6 in "Replacing the palm rest".
- **6** Replace the <u>keyboard</u>.
- 7 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- **8** Replace the <u>base cover</u>.
- **9** Replace the <u>battery</u>.

Flashing the BIOS

You may need to flash (update) the BIOS when an update is available or when you replace the system board. To flash the BIOS:

- 1 Turn on the computer.
- 2 Go to www.dell.com/support.
- 3 Click **Product Support**, enter the Service Tag of your computer and click Submit.

NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

- 4 Click Drivers & downloads.
- 5 Select the operating system installed on your computer.
- Scroll down the page and expand BIOS.
- 7 Click **Download File** to download the latest version of the BIOS for your computer.
- 8 Save the file and, once the download is complete, navigate to the folder where you saved the BIOS update file.
- 9 Double-click the BIOS update file icon and follow the instructions on the screen

Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Information about Dell products and services

www.dell.com

Windows 8.1 and Windows 10

Dell Help & Support app



Windows 10

Get started app



Windows 8.1

Help + Tips app



Accessing help in Windows 8, Windows 8.1, and Windows 10

Accessing help in Windows 7

Online help for operating system

In Windows search, type **Help and Support**, and press **Enter**.

Click Start \rightarrow Help and Support.

www.dell.com/support/windows www.dell.com/support/linux

www.dell.com/support

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on

Learn about your operating system, setting up and using your computer, data backup, diagnostics, and so on.

See Me and My Dell at www.dell.com/support/manuals.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.



NOTE: Availability varies by country and product, and some services may not be available in your country.



NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.