

Philips GoGear audio video player

SA065104K
SA065104S
SA065108K
SA065108S

Quick start guide



PHILIPS

Need help?

Please visit

www.philips.com/welcome

where you can access to a full set of supporting materials such as user manual, the latest software upgrades and answers to frequently asked questions.

Contents

 
EN

- | | | | |
|----|---|----|---|
| 2 | Register your product | 16 | Disposal of your old product and the integrated battery |
| 3 | What's in the box | | |
| 4 | Overview of controls and connections | | |
| 5 | Overview of the main menu | | |
| 6 | Overview of the main touchscreen features | | |
| 7 | Connect SA065 to a computer | | |
| 8 | Connect to install software | | |
| 9 | Install software | | |
| 9 | Turn SA065 on and off | | |
| 10 | Listen to music | | |
| 10 | Play videos | | |
| 11 | Access CMMB subscription channels | | |
| 12 | Record CMMB audio | | |
| 12 | CMMB urgent messages | | |
| 13 | CMMB emergency news and urgent messages | | |
| 14 | Listen to FM radio | | |
| 14 | Settings | | |
| 15 | Manually verify / update firmware | | |
| 15 | Need help? | | |

Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/welcome so we can inform you as soon as new free upgrades become available.


What's in the box

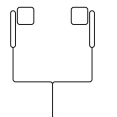

Headphones



 USB cable

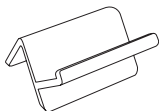

Stand



Quick start guide

* The images serve as reference only. Philips reserves the right to change color/design without notice.

What else you'll need...

 


Computer

You need a computer with the following minimum requirements:

- Pentium III 800 MHz processor or higher
- 128 MB RAM
- 500 MB hard disk space
- Internet connection
- Windows® Internet Explorer 6.0 or later
- USB Port

Overview of controls and connections

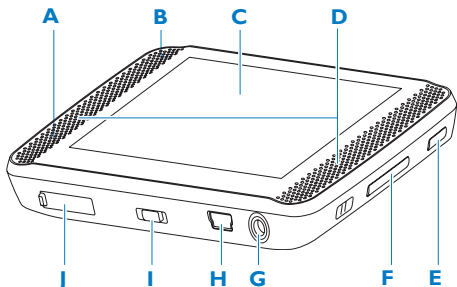


A	RESET	press: reset SA065
B		antenna
C		touchscreen display
D		loudspeakers
E	HOME	back to main menu
F	-VOL +	press: increase/decrease the volume press and hold: increase/decrease fast
G		headphone jack
H		USB connection jack
I		slide and hold: turn SA065 on/off
		slide: lock/unlock all buttons except -VOL +
J	MICRO SD	micro SD card slot

Overview of the main menu

Menu	Mode	To
	Music	play music tracks
	Video	play videos
	Pictures	view pictures
	Radio	listen to FM radio
	Text Reader	create or listen to recordings
	Folder View	view files in folders
	Settings	customize the settings of GoGear Vibe
	CMMB	view CMMB* TV channels listen to CMMB* audio channels

 Overview of the main touchscreen features

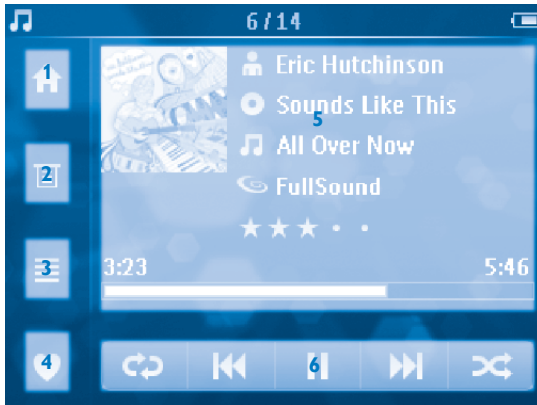

The touchscreen allows navigation and control through direct touch (tap) on the relevant screen area. There are many application-specific features and activities. This is an overview of the basic features.

- | | |
|---|-------------------------------------|
| 1 | home |
| 2 | contextual options |
| 3 | main activities of the application |
| 4 | application-specific feature / back |
| 5 | content area |
| 6 | change / process content |

Connect SA065 to a computer

- 1 Connect the USB plug of the supplied USB cable to a spare USB port on your computer.
- 2 Connect the small USB plug of the USB cable to the small USB jack on SA065.
- 3 Turn on your computer.
 - > SA065 charges.



Note

- For first-time use, allow SA065 to charge for 3 hours.
- The charging animation stops and the  icon is displayed when the charging process is completed.

Connect to install software

- 1 Connect the mini USB plug of the supplied cable to SA065.
- 2 Connect the standard USB plug of the supplied cable to your computer.
> A pop-up window appears on the computer.
- 3 From the pop-up window, select **Install Philips Device Manager**.
- 4 Follow the on-screen instructions to complete the installation of the **Philips Device Manager**.

If the pop-up window fails to appear on the computer...

- 1 Select **My Computer** (WindowsXP® / Windows2000®) / **Computer** (WindowsVista®).
- 2 Right click on **Philips GoGear SA065**.
- 3 Select **Install Philips Device Manager**.
- 4 Follow the on-screen instructions to complete the installation of the **Philips Device Manager**.

Cannot find the file on SA065?

- 1 Ensure that your computer is connected to the Internet.
- 2 Select **My Computer** (WindowsXP® / Windows2000®) / **Computer** (WindowsVista®).
- 3 Right click on **Philips GoGear SA065**.
- 4 Select **Install Philips Device Manager**.
- 5 Follow the on-screen instructions to complete the installation of the **Philips Device Manager**.

Install software

SA065 comes with the following software:

- **Philips Device Manager** (helps you get firmware updates for SA065)

Important

- You can install the software while charging SA065 for the first time.

Turn SA065 on and off

1 To toggle between modes on and off, slide and hold ⓘ for approximately 4 seconds.

SA065 has a lock switch to prevent accidental operation.

1 To lock the buttons when you play, move the slider to position 🔒.

> All buttons except the volume keys are locked and the display shows a lock icon.

2 To unlock the buttons again, move the slider to the center position.

Listen to music

- 1 From the main menu, tap  to enter music mode.
- 2 Navigate the sub-menus to select your music.
- 3 Tap music track to highlight.
- 4 Tap music track again to play.
 - Tap  to pause play.
 - Tap  to resume play.
 - To exit and return to the main menu, press **HOME** or tap .

Play videos

- 1 From the main menu, tap  to enter video mode.
- 2 Navigate the sub-menus to select your video.
- 3 Tap video to highlight.
- 4 Tap video track again to play.
 - Tap  to pause play.
 - Tap  to resume play.
 - To exit and return to the main menu, press **HOME** or tap .

During video play, navigate as follows:

- 1 Tap  or  to skip to next / previous video.
- 2 Tap and hold  or  to scan current video forward / backward.
 - Tap  to resume play.

Access CMMB subscription channels

You can

- watch CMMB* TV channels
- listen to CMMB* audio channels

- 1 From the main menu, tap  to enter CMMB channels.
> SA065 reminds you not watch the screen while driving.
- 2 Extend the built-in telescopic antenna and align for best reception.
- 3 Tap ▲ or ▼ to select a service from the list.
- 4 SA065 scans the frequencies for CMMB signals and displays all available channels.
- 5 Tap on a channel to watch or listen.
 - To exit and return to the main menu, press **HOME** or tap .

Record CMMB audio

You can record the audio of CMMB* channels on SA065:

- 1 From the main menu, tap  to enter CMMB channels.
> SA065 reminds you not watch the screen while driving.
- 2 Extend the built-in telescopic antenna and align for best reception.
- 3 Tap  or  to select a service from the list.
- 4 SA065 scans the frequencies for CMMB signals and displays all available channels.
- 5 Tap on a channel.
- 6 Tap  to start recording the audio of the channel.
 - Tap  to pause recording.
 - Tap  (red dot) to resume recording.
- 7 Tap to save or delete.
 - > Tap to confirm.
 - > SA065 resumes CMMB service.
 - To exit and return to the main menu, press **HOME** or tap .

CMMB urgent messages

The CMMB* service includes urgent messages.

Incoming messages are indicated with the following icon at the top of the screen: 

- 1 Tap **Emergency news** to see the list of news messages.
> Messages are displayed as follows: * = urgent message, n = new message, i = message.
- 2 Tap on a message to open it.
 - Tap  or  to scroll up or down.
 - Tap  to see the options menu.
 - Select the option to delete the message.
- 3 Tap **Close** to close window.
> The current CMMB broadcast continues after the message is closed.

CMMB emergency news and urgent messages

The CMMB* services include emergency news.

Emergency news interrupt the current broadcast with a pop up window.

Upon incoming emergency news...

1 Tap **More** to read more (if message exceeds single screen size).

- Tap  to see the options menu.
- Select the option to delete the message.

2 Tap **Close** to close window.

> *The current CMMB broadcast continues after the message is closed.*

Listen to FM radio

SA065 automatically searches for FM radio stations, then saves the first 20 strongest frequencies under the available presets.

- 1 From the main menu, tap  to enter radio mode.
 - > SA065 starts to play the last played preset.
 - Tap to select any of the preset numbers in the list.
 - To exit and return to the main menu, press **HOME** or tap .

Settings

This is how you customize SA065:

- 1 From the main menu, tap  to enter settings mode.
- 2 Tap  or  to navigate in a list.
 - Tap  to enter sub menu (when available).
- 3 Tap to confirm a selection and go to the next level (when available).
 - To exit and return to the main menu, press **HOME** or tap .

Manually verify / update firmware

- 1 Ensure that your computer is connected to the Internet.
- 2 Connect SA065 to the computer (see section **Connect SA065 to a computer** for instructions).
- 3 On your computer, click **Start > Programs > Philips Digital Audio Player > SA065 Device Manager** to launch **Philips Device Manager**.
- 4 Click **Update**.
 - > **Philips GoGear SA065 Device Manager** checks for updates and installs new firmware from the Internet, if available.
- 5 When the display shows **Update completed**, click **OK**.
- 6 Disconnect SA065 from the computer.
 - > The display of SA065 shows **Updating firmware**.
 - > SA065 restarts after the firmware is updated and is ready for use again.

Need help?

User Manual

See the user manual on the CD-ROM that is supplied with this player.

Online

Go to www.philips.com/welcome

Disposal of your old product and the integrated battery

All our products are designed and manufactured with high quality materials and components, which can be recycled and reused.



The crossed-out wheel bin symbol on a product means that the product is subject to the European Directive 2002/96/EC. This symbol can also be used in combination with a chemical symbol, which means that the product complies with the environmental directive for that chemical.

Never dispose of your product with other household waste. Inform yourself or ask your dealer about local environmentally safe recycling regulations. The correct disposal of your old product helps prevent potentially negative consequences for the environment and human health.

Your product contains a built-in rechargeable battery covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

To safeguard the functionality and safety of your product, always bring your product to an official collection point or service centre where a professional can remove / replace the battery as shown in the user manual.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.



Be responsible
Respect copyrights

Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners

© 2009 Koninklijke Philips Electronics N.V.

All rights reserved.

www.philips.com



Printed in China
wk9213

SA065_97_QSG_V0.2